



SONY E-1000 NOZZLE



Part Number (OEM)	Description
A - 8417 - 333	SONY E1000 SMT NOZZLE Ø0.45 / Ø0.2 (0603)
A - 8417 - 334	SONY E1000 SMT NOZZLE Ø0.6 / Ø0.4 (1005)
A - 8417 - 335	SONY E1000 SMT NOZZLE Ø0.6 / Ø0.4 (1005)
A - 8417 - 336	SONY E1000 SMT NOZZLE Ø0.8 / Ø0.5 (1608)
A - 8417 - 337	SONY E1000 SMT NOZZLE Ø1.0 / Ø0.7 (1608)
A - 8417 - 338	SONY E1000 SMT NOZZLE Ø1.0 / Ø0.7 (1608)
A - 8417 - 339	SONY E1000 SMT NOZZLE Ø1.2 / Ø0.8
A - 8417 - 340	SONY E1000 SMT NOZZLE Ø2.5 / Ø2.0
A - 8417 - 341	SONY E1000 SMT NOZZLE Ø4.0 / Ø3.0
A - 8417 - 342	SONY E1000 SMT NOZZLE Ø6.0 / Ø4.0
A - 8417 - 332	SONY E1000 SMT NOZZLE Ø1.2 / Ø0.8
A - 8417 - 433	SONY E1000 SMT NOZZLE Ø2.5 / Ø2.0
A - 8417 - 432	SONY E1000 SMT NOZZLE Ø4.0 / Ø3.0
A - 8417 - 434	SONY E1000 SMT NOZZLE Ø6.0 / Ø4.0